

TOP DÉCOR CEILING CLADDING

Fixing Instructions

Fix timber battens to the ceiling, at approx. 30cm centres in the opposite direction to which the ceiling panels are to be installed.

If an edge detail is being used it may be necessary to fit this in position before the first ceiling panel is installed.

The ceiling panels can be fixed through the lip of the panel with either nails, staples or screws.

The first panel should be fixed in position and the insert/connector located into the panel groove. The next ceiling panel can then be slotted into position. Continue this procedure until the ceiling is covered.