






multi purpose trims

1. Remove protective tape A. before installation.
2. Bend once at appropriate flexible joint for required finish (repeated bending will result in cracking of trim).
3. In shower or wet areas additional silicon should be applied to multi purpose trim.


Colour matched for the following ranges:

- Marmo, Carrara, Craquele and Shining White


available in high gloss white for all other applications.

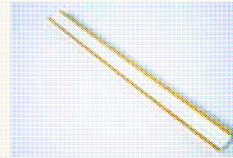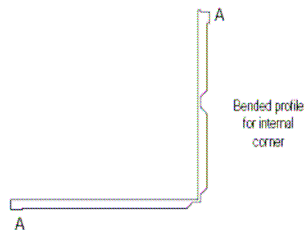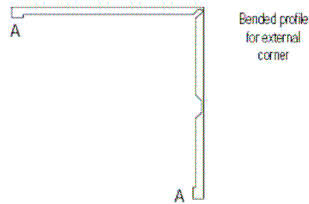


Multi purpose trim

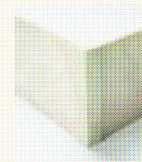

External corner

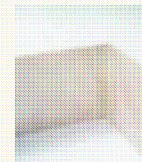

Internal corner

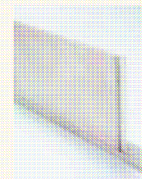

Perimeter trim